

Piaggio Medley 125-150 ABS 2016
Art.3190/EX - 3190/A - 3193/LD (att.3192/E)




3190/EX



3190/A



3193/LD

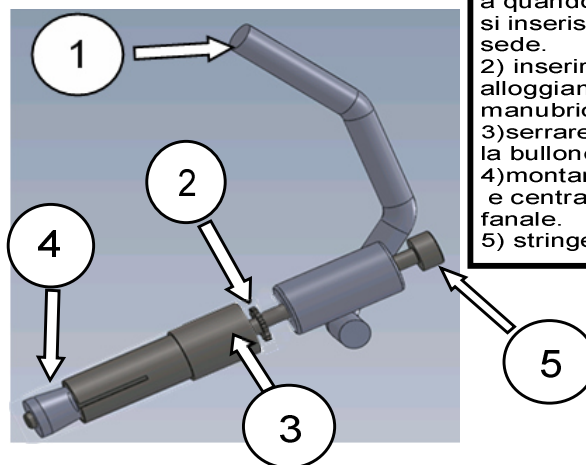

Istruzioni di montaggio

- 1) pre-serrare la vite fino a quando il dado conico si inserisce nella propria sede.
- 2) inserire l' attacco nell' alloggiamento del manubrio.
- 3) serrare leggermente la bulloneria
- 4) montare il parabrezza e centrarlo rispetto al fanale.
- 5) stringere la bulloneria.

Fitting instructions

- 1) Pre assembly all parts til conic nut is close to its room
- 2) insert pre assembled fitting stay under the plastic cover.
- 3) Tighten a little bit the hardware
- 4) put the windshields on stays and center it with HL
- 5) tighten strongly the hardware.

Istruzioni di smontaggio

- 1) allentare le viti M8x110 di 4-5 mm
- 2) dare un leggero colpo do martello sulla testa delle viti stesse per sbloccare il dado conico
- 3) sfilare gli attacchi dal manubrio

Disassembly instruction

- 1) loosen 4-5 mm the bolts M8x110 (n°5)
- 2) give a blow of the hammer directly on the head of the bolts to release the expander
- 3) slip off the stay from the handle

NB: le 4 fascette plastiche sono rivolte esternamente alle aste

ATTENTION: 4 plastic clamps are turned outside the metallic stays



Descrizione	Q.tà	Pos.
Asta dx+sx / Stay Lh+Rh	1+1	1
Rondella dentellata ø8 / Grower ø8	2	2
Expander ZB	2	3
Dado conico ZB / Conic Nut	2	4
Vite M8x110 ZB / Bolt	2	5